

# Cleaning Instructions

---

## GlacierScreen+ Twill & Basketweave

- Remove dust with a vacuum cleaner or compressed air.
- Do not scrub.
- Clean with a sponge or soft brush dipped in warm soapy water.
- If cleaners other than mild soap and water are desired, test in an inconspicuous area, prior to use.
- Rinse with clean water.
- Do not use any abrasive substances that might damage the fabric. Paint solvents will damage the polymer surface and should not be used.
- Avoid strong cleaners, bleach and disinfectants, especially those containing quaternary ammonium compounds and phenols.
- Leave the blind down until completely dry.
- A clean white pencil eraser may also be used to gently rub the fabric to remove small stains.

### Ultrasonic Cleaning

Ultrasonic blind cleaning involves immersing the blind in a tank of cleaning fluid typically consisting of clean tap water and a mild detergent then flooding them with high frequency sound waves. These non-audible sound waves create a scrubbing brush action within the fluid that removes years of dirt, dust and grime that have been built up over a long period of time.

### Benefits of Ultrasonic Cleaning

- Eliminates germs, bacteria and pollutants.
- Reduced electrostatic charge, which reduces dust build up.
- Unlike other cleaning methods, fabrics are less likely to be damaged.
- It is recommended to use biodegradable cleaning solutions, which are environmentally friendly.

## GlacierScreen+ RD 0%

Remove surface dust by regularly dusting with a feather duster or soft cloth. Stains or smudges can be removed by wiping with a sponge soaked in lukewarm water containing a little neutral soap and then sponged with fresh water and dried gently with a clean towel. Small marks can be removed by a light rub with an art gum rubber. Never use abrasive or solvent based cleaners, and never roll up a blind which is damp.