



RTS Repeater

Part #1810791

OVERVIEW

The Somfy RTS Repeater can be used in installations to extend the range of the standard Radio Technology Somfy signal. It will receive the signal from a Telis or similar device and retransmit the signal to a RTS compatible motor or receiver.

Simply plug the receiver into any 120v AC outlet. It should be located at least halfway between the transmitting device (Telis) and receiving device (RTS Motor). The red LED will blink, indicating communication.



TECHNICAL INFORMATION

ELECTRICAL

Power supply	AC - RGE 2 - 120V/60HZ
--------------	------------------------

OTHER

Customization	Pure/White
---------------	------------

INSTRUCTIONS

1. Plug the repeater into any 120v electrical outlet.
2. Plan the distance halfway between the RTS repeater and the RTS motor or sensor.
3. The red LED will blink when communication has been achieved.

Use:

RTS Repeater extends the range of the Radio Technology Somfy signal. It receives the signal from a Somfy control or sensor and sends it to an RTS compatible motorized window covering.

For Indoor Use Only

Only Use One Repeater Per Project