

# URTSI II Universal RTS Interface



## OVERVIEW:

The **Universal RTS Interface II (URTSI II)** is an integration device that allows third party systems to control Radio Technology Somfy® motorized applications. The URTSI II can control up to 16 RTS channels individually and/or as a group through RS232, RS485 and IR. Multiple URTSI IIs can be joined together to control up to 256 channels using the RS485 expansion port. Its simple design allows you to quickly duplicate programming from existing RTS transmitters and easily locate it within the space without the need for line of sight to the motorized window coverings.



## TECHNICAL SPECIFICATIONS:

- Power Input: 9 V DC, 200mA-UL approved
- Power Consumption: 20 mA
- Material: ABS
- Dimensions: 3" L x 4" W x 1.75" H
- Maximum Range: 65 feet radius (under optimal conditions)
- Operating Temperature Range: Ambient temperature
- Shipping Weight: 1 lb.
- LED: Bi-color
- Frequency: 433.42 Mhz

## FEATURES SUMMARY:

- 16 channels of RTS control per URTSI II
- Communicates with:
  - RS232
  - RS485
  - IR
- Using RS485
  - Control up to 16 URTSI IIs together 256 channels in a system
  - Cascade up to 16 URTSI IIs with one wire
  - Power up to 16 URTSI IIs with one power supply in a system

## WHAT'S IN THE BOX:


- URTSI II
- Antenna
- Power Supply
- DB9 to RJ45 for RS232

## OPTIONAL ACCESSORIES:


- IR Receiver #9015078
- IR Transmitter #1810498
- DB9 to RJ45 for RS232 #9015028
- DB9 to RJ45 for RS485 #9015029
- RS232 to RS485 Converter #1810496

## CABLE PINOUTS:


### RS232 input or RS485 input

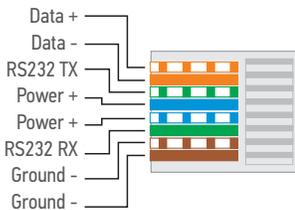

### RS485 expansion

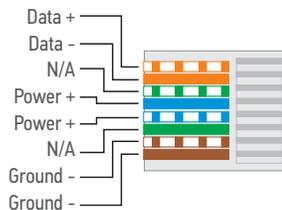


### RJ45 to DB9 RS232

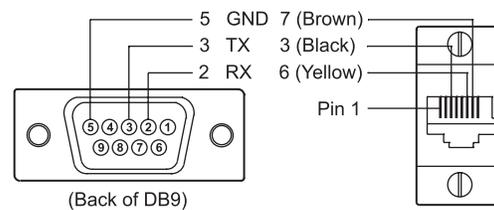


## CONNECTIONS AND INDICATORS:

### Front View

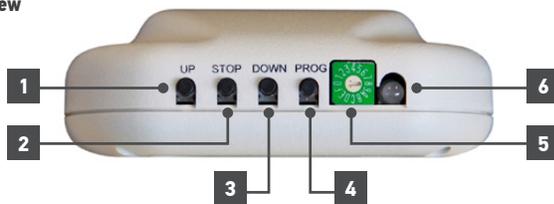


### Back View

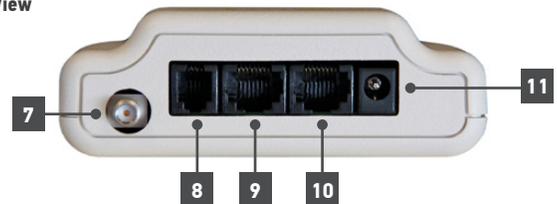

ELEMENT	FUNCTION
1 <b>Up Button</b>	RTS (Test) Up directional button
2 <b>Stop Button</b>	RTS (Test) Stop directional button
3 <b>Down Button</b>	RTS (Test) Down directional button
4 <b>Programming Button</b>	RTS Programming button
5 <b>Rotary Dial</b>	Programming: RTS Channel selector Operation: URTSI II Address selector (RS485) (A-0 = CH 10-16)
6 <b>Bi-Color LED</b>	Green = Power; Red Flash = RTS Transmission

ELEMENT	FUNCTION
7 <b>Antenna</b>	RTS antenna
8 <b>IR Sensor Input</b>	RJ9 port for Somfy's IR Receiver (9015078)
9 <b>RS232 or RS485 Input</b>	RJ45 for RS232 or RS485 serial input
10 <b>RS485 Expansion</b>	RJ45 for RS485 expansion
11 <b>Power</b>	3.5mm jack for included power supply (9V DC 200mA)

## DIMENSIONS:

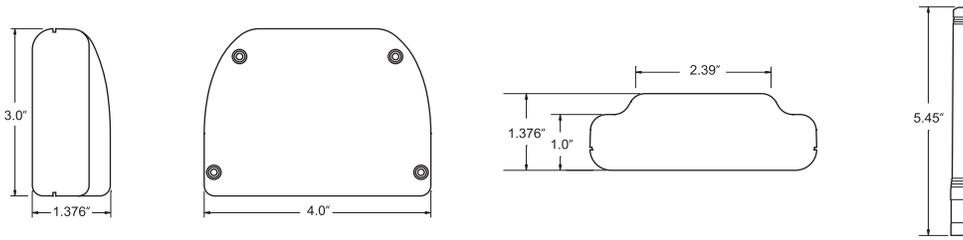

## BEST WIRING PRACTICES

The diagram shown below is meant for illustrative purposes to show the connections from product to product. This device could be used in other configurations than shown below.

Please ensure that the limits on the motor have been set and tested. Somfy recommends placing the URTSI II in a central location and that each channel is tested to ensure proper communication between the URTSI II and motorized window covering prior to integration.

Somfy recommends using specified adapters and cables.

