

Installation Instructions

HunterDouglas 
Architectural



RB 500+ Manual **Roller Shades** with Heavy Duty+ Clutch and Brackets and 4" Fascia - Inside Mount

Window Coverings

Hunter Douglas Architectural Window Coverings continues to deliver expertly engineered solutions to manage light and glare control.


This booklet provides installation instructions that can be used as a stand alone piece or may accompany video instructions at bit.ly/2vm9z2p

RB 500+ Manual **Roller Shade**

with Heavy Duty+ Clutch and Brackets
and 4" Fascia - Inside Mount

HunterDouglas 
Architectural

WARNING/ADVERTENCIA

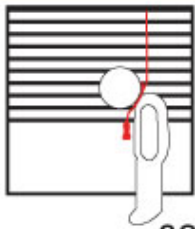

Window Blind Cord Strangulation Risk

Window blinds with a damaged or loose tension device or retractable cord that fails to fully retract pose a strangulation risk to children. To avoid this potential strangulation risk, consider purchasing cordless products or products with inaccessible cords.

Riesgo de Estragulación en Cuerdas de Persianas

Las persianas con un dispositivo tensor suelto o dañado o con una cuerda retráctable que no se ajusta completamente representan un riesgo de estrangulación para los niños. Para evitar un posible riesgo de estrangulamiento, considere comprar productos inalámbricos o productos con cuerdas inaccesibles.

Copyright © 2019 Hunter Douglas Architectural

800-727-8953

HDarchitectural.com

Materials Needed



Laser Level



Measuring Tape



Pencil



**Flat Blade and
Philips Screwdrivers**



2" Screws #10



Needle Nose Pliers



**Power Drill, 5/32" & 1/8"
Drill Bits 5/16" hex driver**

Installation Process



Begin by installing the brackets. First, measure and mark the ordered width of the shade inside the window casement. A minimum of 4" is required for mounting.



Note that if you've chosen to include bracket covers, leave a 1/8" gap between the bracket and the window mullion.



Place your first bracket in its mounting location and mark the screw holes. Place your second bracket and repeat the process.

Next, pre-drill your screw holes using a 5/32" drill bit.




If your shade order did not include a leveler, go ahead and attach the brackets with the provided screws using the 5/16" hex driver.



The brackets should be level and aligned.



If you've chosen the pre-assembled leveler option, ensure that the opening to access the leveling set screw is pointing downward before installing the brackets. This is where you will insert the provided Allen Key to adjust skewing.

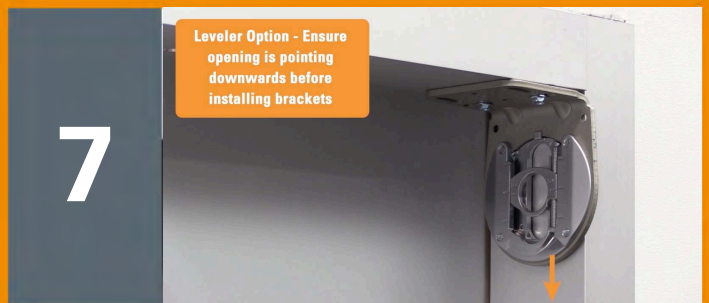

To adjust, insert the Allen Key into the set screw of the leveler. To lower the shade, turn the Key to the right to rotate the set screw clockwise. To raise the shade, turn the Key to the left to rotate the set screw counter clockwise. All adjustments can be made after the shade has been installed and operation has been tested.





9

Next, install the clutch end of the shade onto the tab on the clutch-side bracket. The bottom of the clutch should always point straight down.




10

Finally, push the idle end into the shade and place into the idle end bracket.




11

Secure the shade by turning the locking ring away from the bracket.

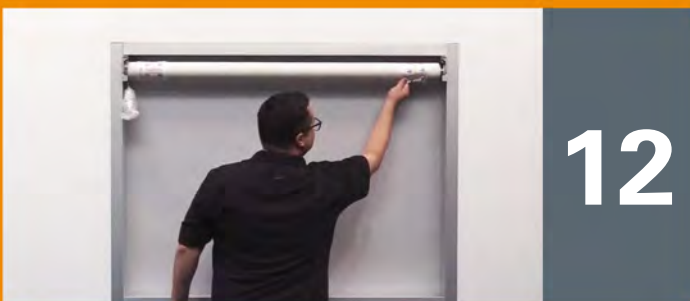

12

At this point, the tape band and child safety tag can safely be removed.

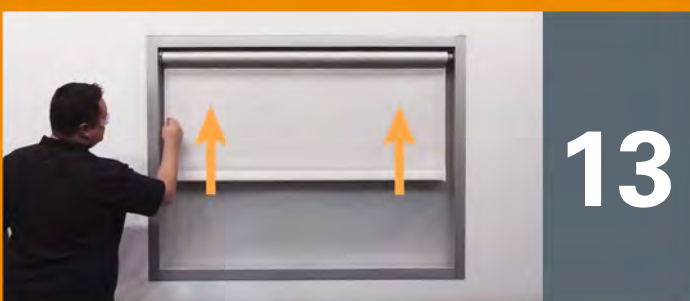

13

Now is a good time to check that the shade is level and aligned and functioning properly. Raise and lower shade to check functionality.


14

Now you're ready to install the cord tensioner. Refer to the videos below.

- [Inside Mount Video](#)
- [Inside Mount with Bracket Video](#)


If no further adjustments need to be made, proceed with installing the fascia. Insert the top lip of the fascia into the top insert of the bracket. Rotate the fascia down toward the window, applying pressure until the fascia snaps into place.

15

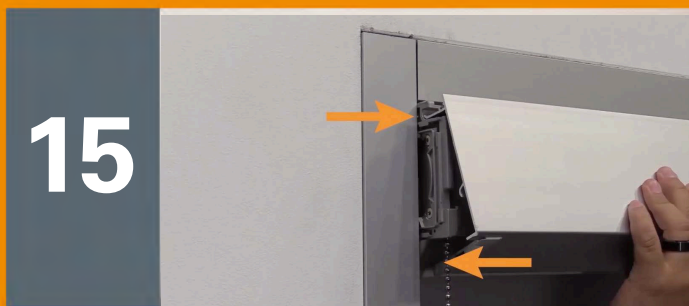



Check to ensure fascia is secure. Note that if bracket covers were not required, the fascia will run the full desired width.

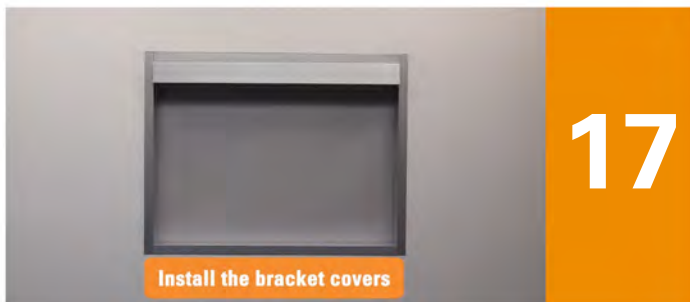

If bracket covers were ordered, slide the covers between the brackets and the mullions. Make sure the grooves match while sliding in.



Check shade functionality one final time!

Uninstallation Process

If optional bracket covers were installed, start by sliding them out. To remove the fascia, push upward from the bottom of the fascia and pull away from the brackets.



Next, remove the cord tensioner.



Loosen the locking ring by turning it in the direction of the bracket.



Using a flathead screwdriver, push the idle end into the shade. Lower the idle end side to allow removal of the clutch end.



You're now ready to Uninstall the brackets using the 5/16" hex driver!



Congratulations!

You have now successfully installed and uninstalled an outside mounted RB 500+ Manual Roller Shade with Standard Duty Brackets.