



Square and Level 15/16" Commercial T-Grid

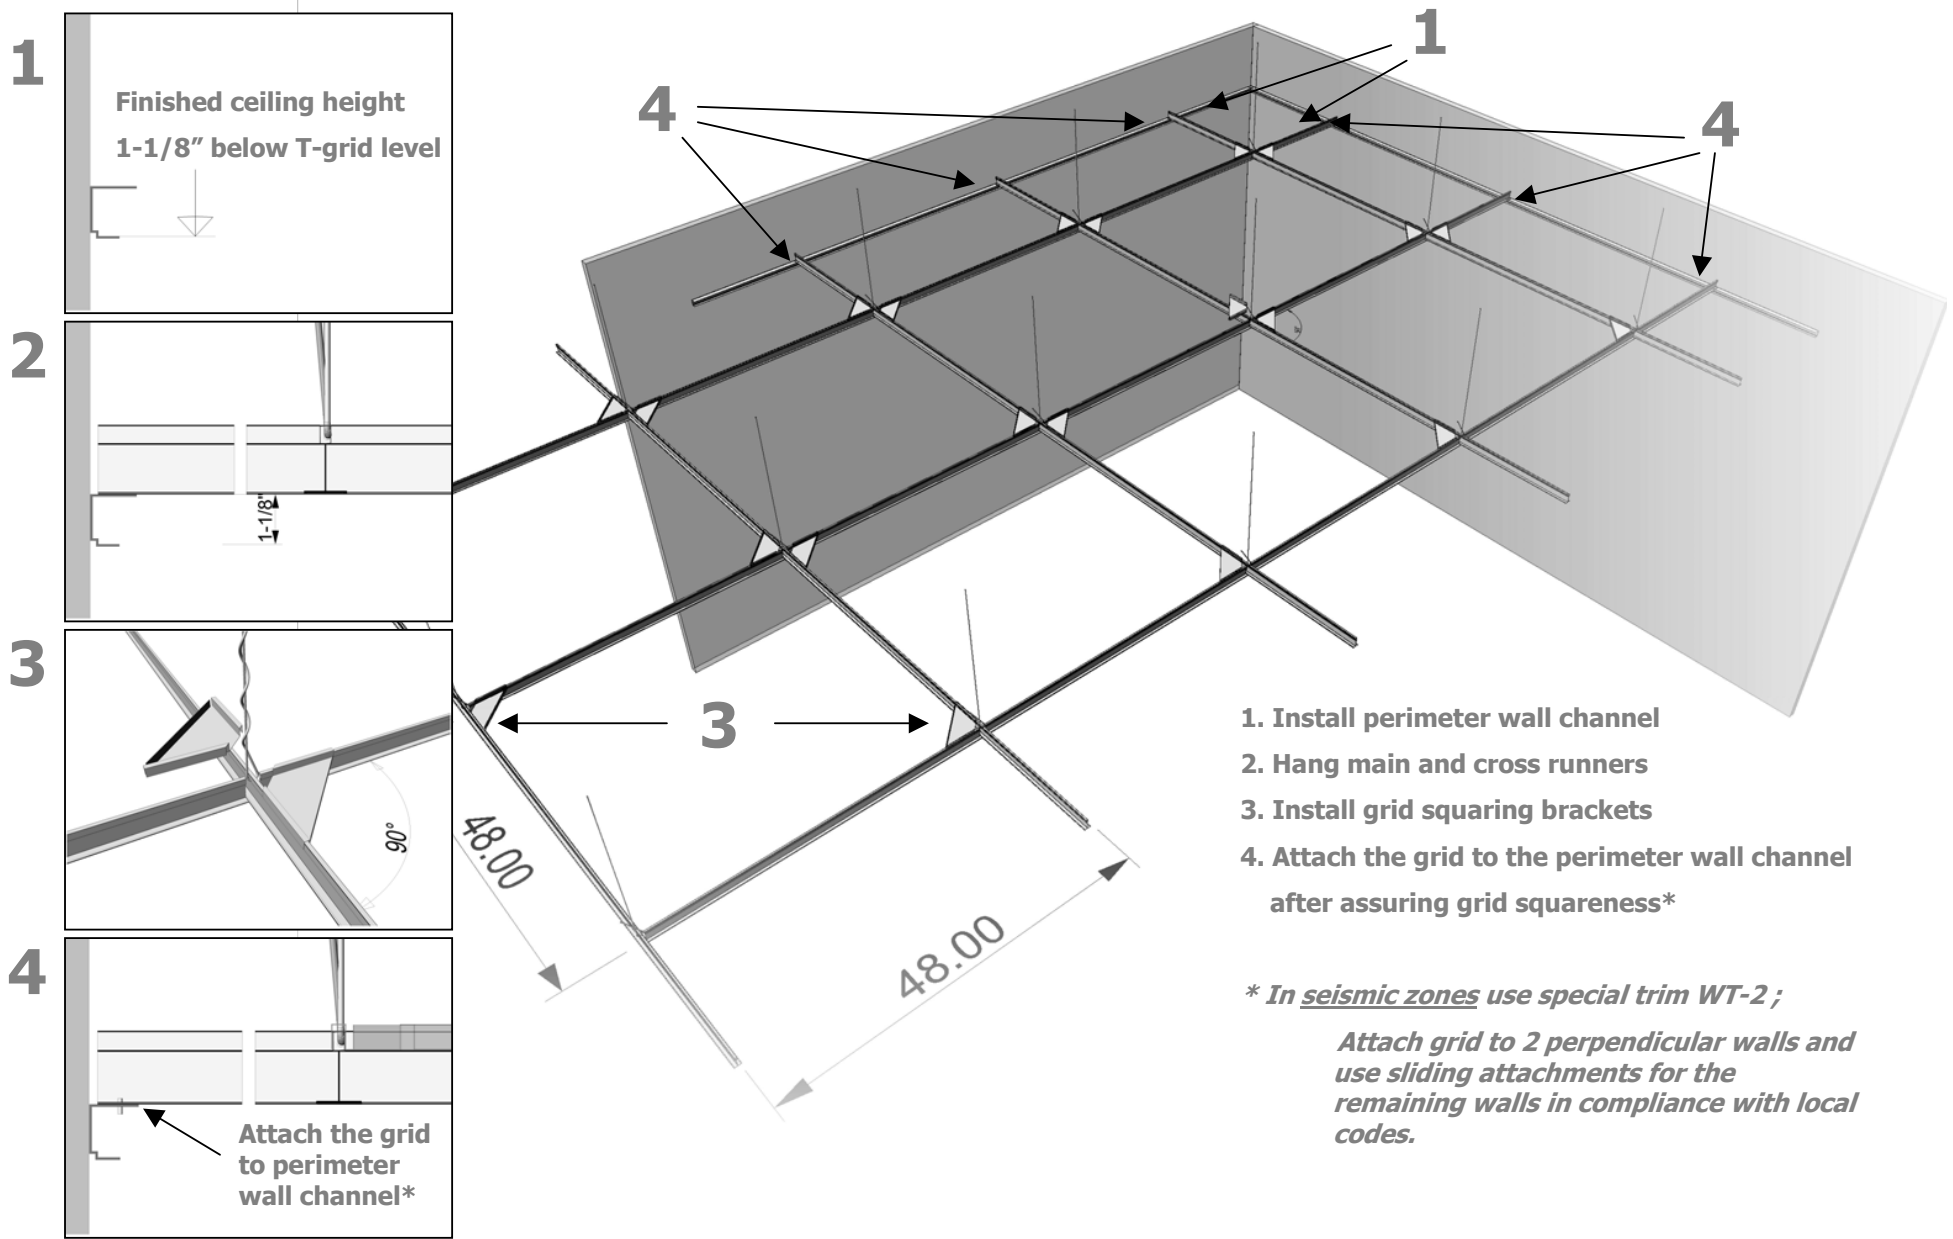



Techstyle Panel installation ... Directional!!

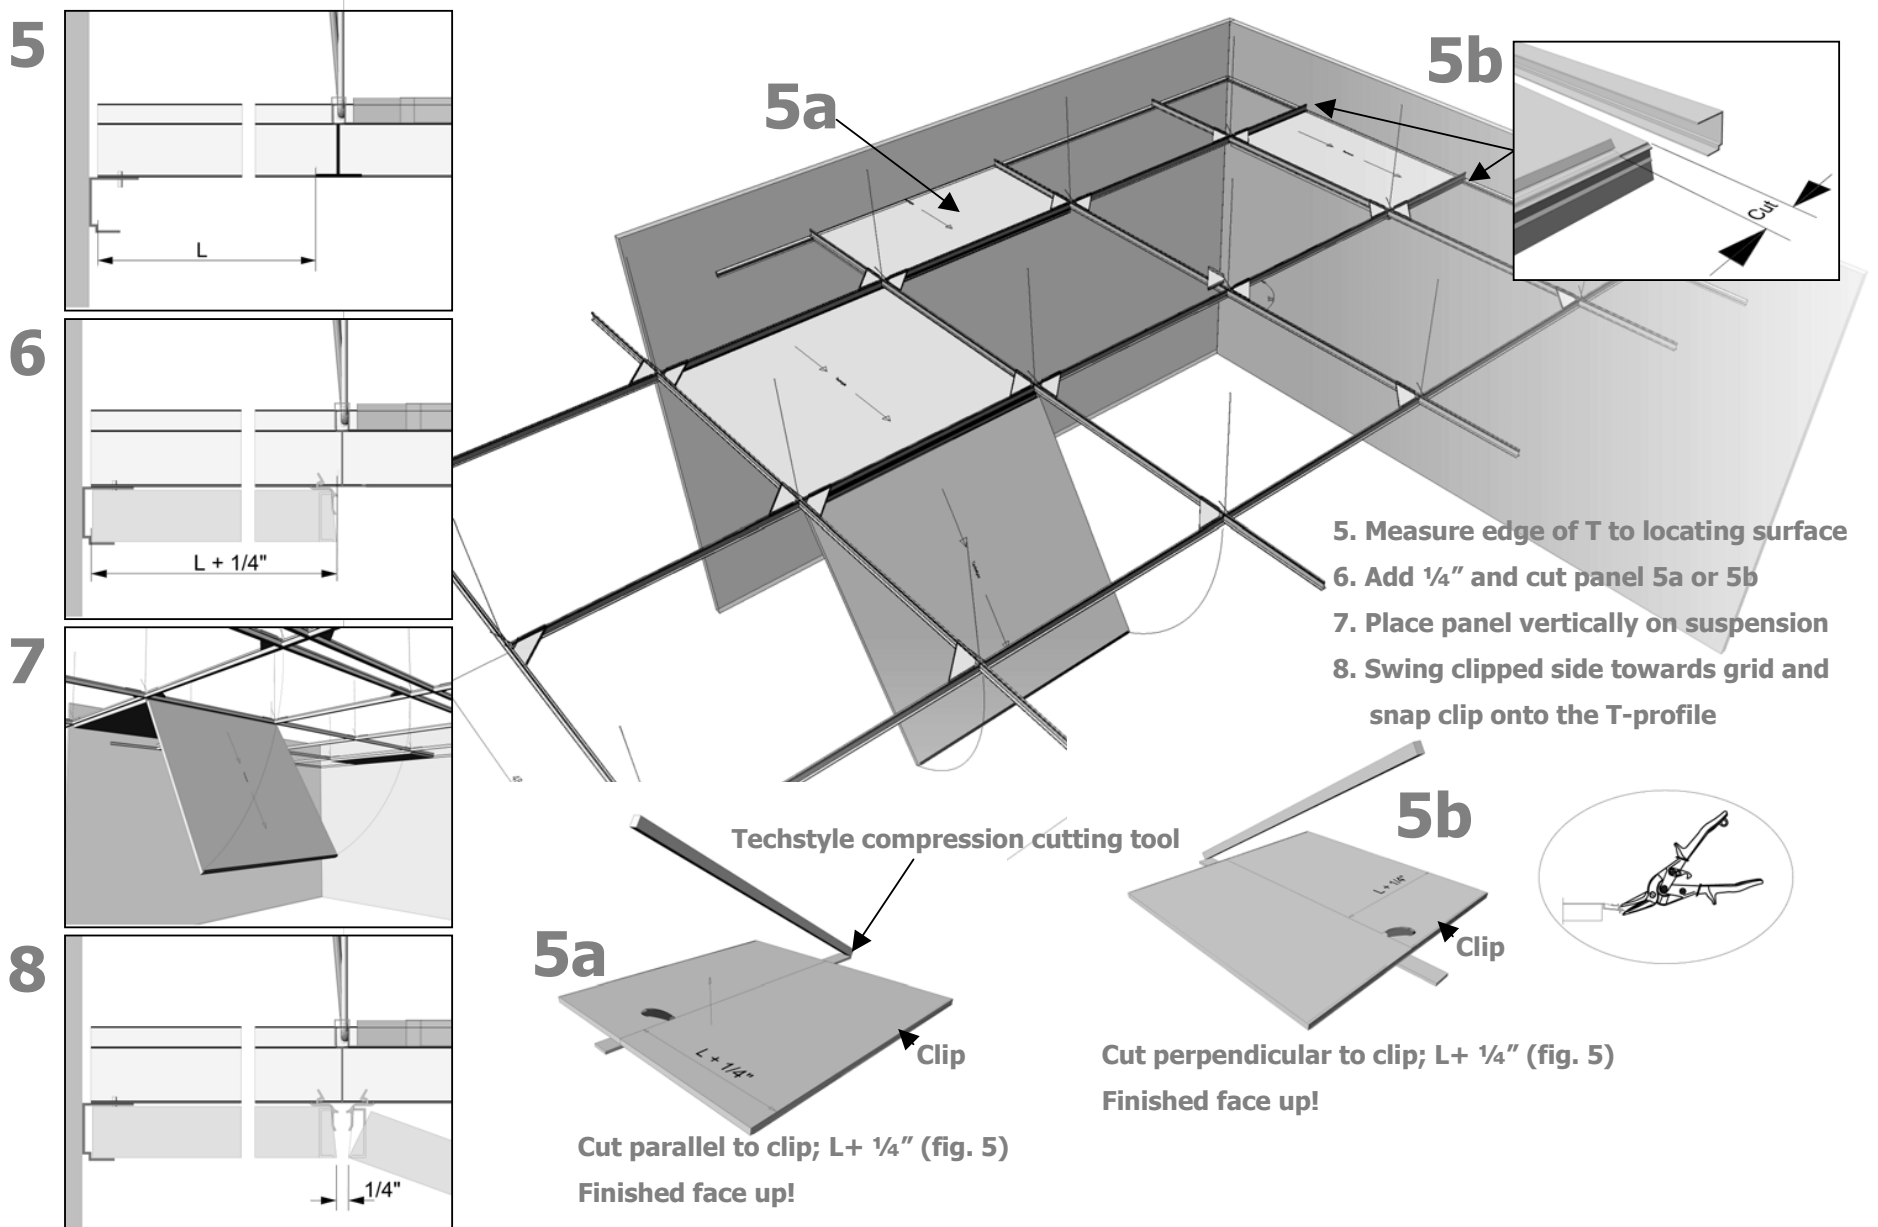

!! Important: Wear clean latex gloves when handling panels. Use a cut out piece of tile, face to face to rub gently until dirt gradually disappears. For persistent marks, a moistened (baby) wipe may be used.

Techstyle Perimeter Panels

"Cuts Parallel to Panel Clip"

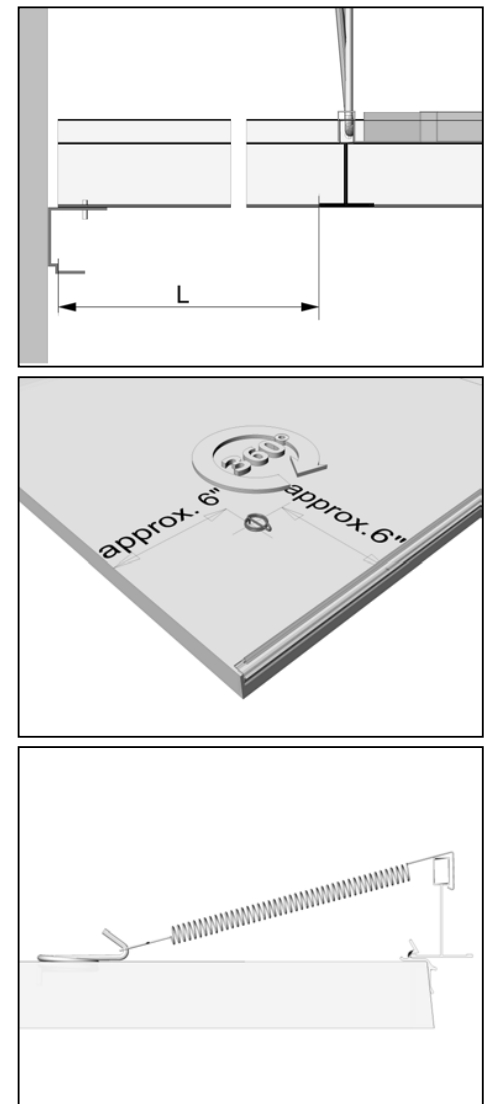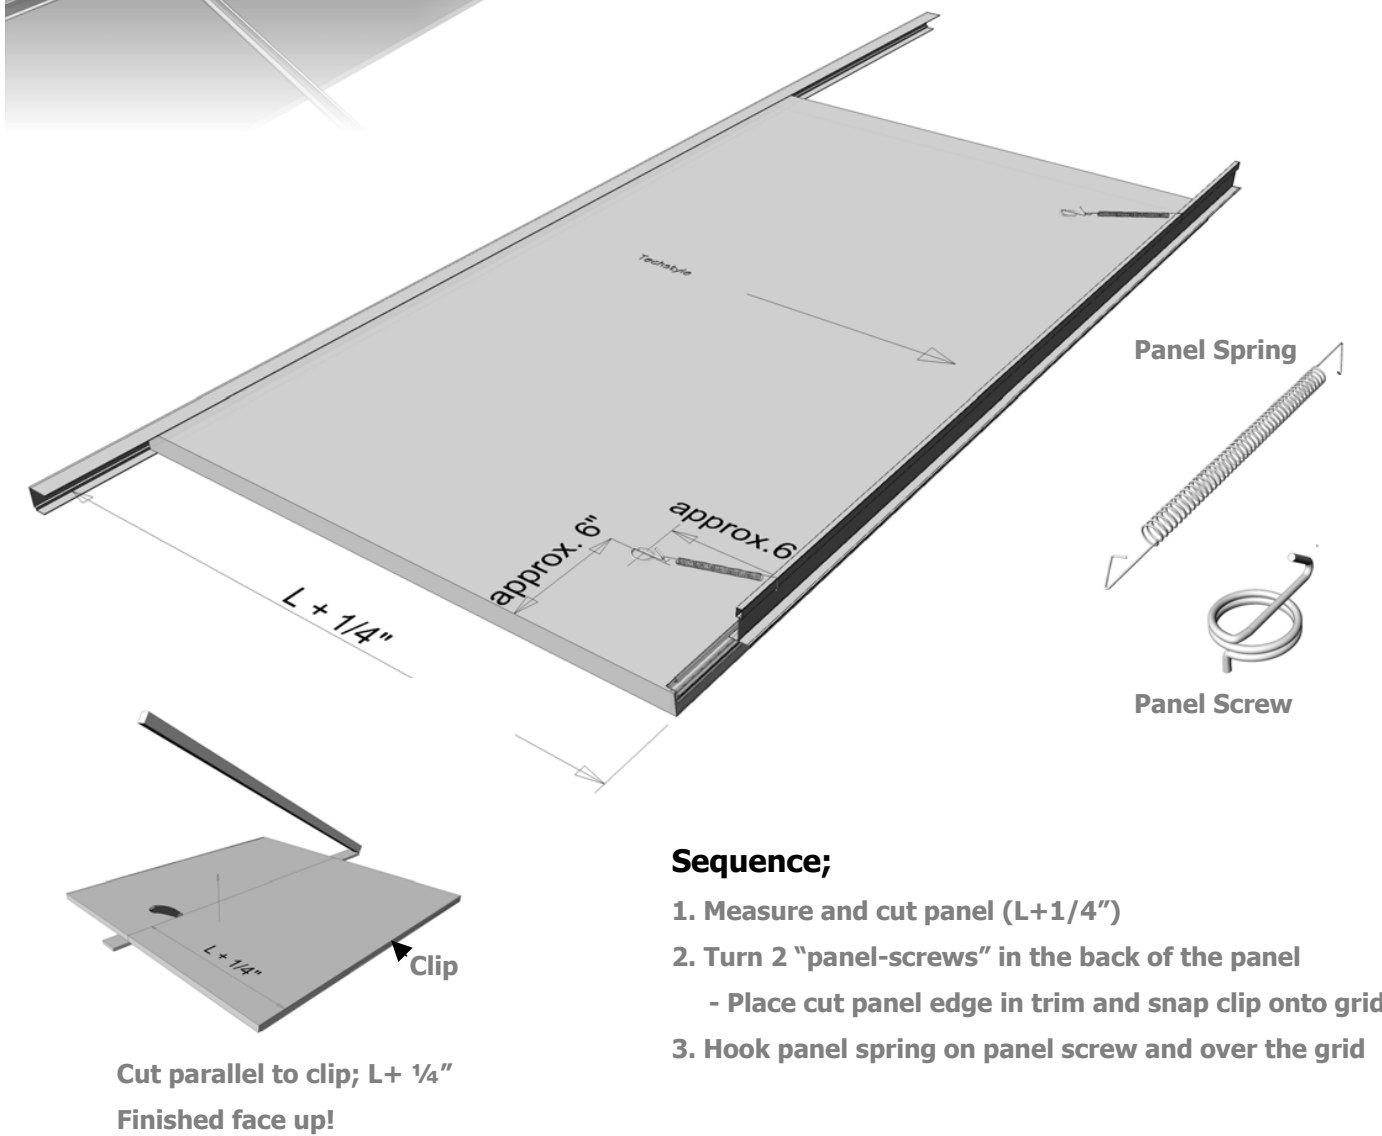

"Cuts Perpendicular to Panel Clip"

